

ZOOM 20- ITEM # 4220

SERIAL NUMBER BEGINNING WITH "NV"



B14-C



C40006



H-1002



P40003



P40006



P40007



P40008



P40011



P40012



P40013



P40014



P40017



P40023



P40026



P40028



P40035



P40047



V42065


V42099

V42066

V42067



P42007




P42009



P42010



P42012

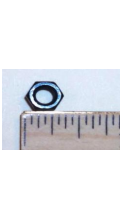

P42013



P42015



P42037



V42010



P-CABLE



P-COVER



V42007



V42009



V42011



V42064



V42074D



V42075



V42076



V42077S



V42079



V42080



V42081


V42082

V42084



V42085

V42087

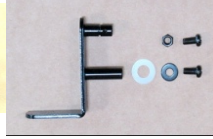

V42088



V42089

V42090

V42091

V42093



V42094

V4218N



NOVA Customer Service: 800-557-6682
www.NovaMedicalProducts.com

ITEM NUMBER 4220		
	ZOOM 20	
	SERIAL NUMBER BEGINNING WITH "NV"	
ITEM NUMBER	DESCRIPTION	MSRP
B14-C	B14 HAND BRAKE WITH STEEL CABLE	\$19.95
C40006	SCREW TO ATTACH B11/B14 TO HANDLE	\$3.50
H-1002	LOCK N LOAD	\$19.95
P40003	HANDLE SILENCER	\$2.50
P40006 (5 PACK)	BEARINGS FOR 5"/6"/8" WHEELS	\$9.95
P40007	SCREW TO ADJUST CABLE TENSION	\$2.50
P40008	BEARING FOR FRONT SWIVEL FORK	\$3.50
P40011	NUT FOR FORK STEM P40035	\$2.50
P40012	STEEL WASHER FOR BRAKE SHOE	\$2.50
P40013 (PAIR)	CRIMP FOR END OF STEEL CABLE	\$2.50
P40014	WHITE PLASTIC WASHER FOR BRAKE SCREW	\$2.50
P40017	MALE AXLE FOR REAR WHEEL	\$2.50
P40023	WASHER FOR REAR AXLE	\$2.50
P40026	WHITE PLASTIC CABLE GUIDE - PART HELD ON BY RIVET	\$3.50
P40028	STEEL NUT FOR FOLDING MECH AND REAR FORK	\$2.50
P40035	SCREW TO ATTACH FORK TO FRAME	\$6.95
P40047	REFLECTOR FOR B14-C	\$2.50
P42007	SCREW FOR FOLDING MECHANISM	\$2.50
P42009	CONTOURED WASHER FOR FOLDING MECHANISM	\$2.50
P42010	PLASTIC CONTOURED WASHER FOR FOLDING MECHANISM	\$2.50
P42012	NUT FOR BRAKE SHOE CABLE LOCKING SCREW	\$2.50
P42013	BRAKE SPRING	\$3.50
P42015	CABLE LOCKING SCREW FOR BRAKE SHOE	\$2.50
P42037	BLACK STRAP FOR CROSSBAR	\$2.50
V42010	HAND GRIP ANATOMICAL (PAIR)	\$6.95
P-CABLE (PAIR)	CABLE FOR HAND BRAKE	\$3.50
P-COVER	BLACK CABLE COVER	\$3.50
V42007	U-SHAPE SEAT ATTACHMENT	\$2.50
V42009	A-FRAME SCREW SET FOR FRAME	\$2.50
	4202/4203/4207/4218/4220/4222	
V42011 (PAIR)	STOPPER FOR SEAT	\$2.50
V42064	SCREW & NUT FOR BACKREST HINGE	\$2.50
V42065	BLUE FLIP UP BACKREST FOR 4220BL	\$19.95
V42066	RED FLIP UP BACKREST FOR 4220RD	\$19.95
V42067	GREEN FLIP UP BACKREST FOR 4220GN	\$19.95
V42074D	8" FRONT AND REAR WHEEL	\$19.95
V42075	FORK FOR 8" FRONT WHEEL W/STEM	\$19.95
V42076	BLACK PLASTIC HINGE FOR BACKREST	\$2.50
V42077S (4PACK)	SCREWS TO ATTACH PADDED SEAT TO FRAME	\$2.50
V42079	LEFT HANDLE BAR	\$9.95
V42080	RIGHT HANDLE BAR	\$9.95
V42081	AXLE FOR FRONT WHEEL	\$3.50
V42082	AXLE FOR REAR WHEEL- FEMALE	\$3.50

V42084	PADDED SEAT FOR ALL ZOOM WALKERS	\$29.95
V42085	NUT FOR FRONT AXLE	\$2.50
V42087	BRAKE SHOE	\$9.95
V42088	FOLDING MECHANISM	\$9.95
V42089	TRIANGLE SHAPED HEIGHT ADJUSTMENT KNOB	\$6.95
V42090	CONTOURED SPACER FOR REAR WHEEL AXLE SCREW	\$2.50
V42091	STEEL SPACER FOR REAR WHEEL AXLE SCREW	\$2.50
V42093	FOAM CUSHION FOR FLIP UP BACKREST	\$6.95
V42094	SLANTED A-FRAME PLUG	\$6.95
V42099	BLACK FLIP UP BACKREST FOR 4220BK	\$19.95
V4218N	UNDER SEAT POUCH W/INNER POCKET	\$24.95

NOVA Customer Service: 800-557-6682
www.NovaMedicalProducts.com