

CRUISER DELUXE- ITEM # 4202

SERIAL NUMBER BEGINNING WITH "NT"



B14-C



C40006



C4203B



H-1002



KP4202



KP4218F



P40001



P40006



P40007



P40008



P40009



P40011



P40013



P40015




P40016



P40017



P40021

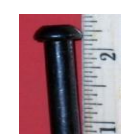

P42193BK

P42193BL

P42193GN

P42193PL

P42193RD



P40026



P40027



P40028



P40029



P40030



P40031



P40033



P40035



P40045



P40047




P42003



P42004



P42007



P42009



P42010



P42041



P42058



P42087



P42090



P42093



P42094



P421512



P4215S



P42191



P42191FM



P42192



P-CABLE



P-COVER



V42009



V42076



V42089



V42093



NOVA Customer Service: 800-557-6682
www.NovaMedicalProducts.com

ITEM NUMBER 4202	CRUISER DELUXE	
	SERIAL NUMBER BEGINNING WITH "NT"	
ITEM NUMBER	DESCRIPTION	MSRP
B14-C	B14 HAND BRAKE WITH STEEL CABLE	\$19.95
C40006	SCREW TO ATTACH B11/B14 TO HANDLE	\$3.50
C4203B	BASKET FOR 4200/4202/4203/4207/4212/4200C/4202C	\$19.95
H-1002	LOCK N LOAD	\$19.95
KP4202	KIT FOR NARROW HUB 4202 WHEEL (P42085,P40017, P40021,P42090,P40016)	\$19.95
KP4218F	FORK ASSEMBLY FOR 8" FRONT WHEEL (INCLUDES P40033,P40016,P42090)	\$24.95
P40001 (5 PACK)	SCREWS TO ATTACH PLASTIC SEAT TO FRAME (4200-4203/4208/4212)	\$2.50
P40006 (5 PACK)	BEARINGS FOR 5"/6"/8" WHEELS	\$9.95
P40007	SCREW TO ADJUST CABLE TENSION	\$2.50
P40008	BEARING FOR FRONT SWIVEL FORK	\$3.50
P40009	COVER FOR SWIVEL BEARING 4200 FRONT FORK	\$5.00
P40011	NUT FOR FORK STEM P40035	\$2.50
P40013 (PAIR)	CRIMP FOR END OF STEEL CABLE	\$2.50
P40015	NUT COVER FOR WHEEL AXLE	\$2.50
P40016	NUT FOR FRONT/REAR WHEEL AXLE	\$2.50
P40017	MALE AXLE FOR REAR WHEEL	\$2.50
P40021	FEMALE AXLE FOR REAR WHEEL	\$2.50
P40026	WHITE PLASTIC CABLE GUIDE - PART HELD ON BY RIVET	\$3.50
P40027 (PAIR)	BRAKE SHOE FOR (4202/4207/4212/4214/4215/4216) INCLUDES SPRING	\$9.95
P40028	STEEL NUT FOR FOLDING MECH AND REAR FORK	\$2.50
P40029	SCREW TO ATTACH REAR BRAKE FORK TO FRAME	\$2.50
P40030	SCREW TO ATTACH BRAKE SHOE TO REAR FORK	\$2.50
P40031	FORK FOR 8" REAR WHEEL	\$19.95
P40033	FORK FOR 8" FRONT WHEEL W/STEM	\$19.95
P40035	SCREW TO ATTACH FORK TO FRAME	\$6.95
P40045	CENTER SCREW AND WASHER FOR FOLDING MECHANISM	\$2.50
P40047	REFLECTOR FOR B14-C	\$2.50
P42003	U-SHAPE SEAT ATTACHMENT	\$2.50
P42004 (PAIR)	ANTI-RATTLE SEAT CLAMP FOR PLASTIC SEAT	\$2.50
P42007	SCREW FOR FOLDING MECH	\$2.50
P42009	STEEL CONTOURED WASHER FOR FOLDING MECHANISM	\$2.50
P42010	PLASTIC CONTOURED WASHER FOR FOLDING MECHANISM	\$2.50
P42041	SLANTED A-FRAME PLUG	\$2.50
P42058	PAD FOR 4202/4207/4010/4214/4215 SEAT	\$24.95
P42087	SPACER FOR 8" 4202 WHEEL	\$2.50
P42090	AXLE FOR FRONT WHEEL (4202/4214/4215)	\$2.50
P42093	LEFT BLACK ANATOMICAL GRIP 4202/4207/4214/4215	\$3.50
P42094	RIGHT BLACK ANATOMICAL GRIP 4202/4207/4214/4215	\$3.50

P421512	HANDLE SILENCER FOR 4202/4207/4214/4215	\$2.50
P4215S	SEAT FOR 4202/4207/4214/4215	\$19.95
P42191	STEEL HANDLE (LEFT) FOR 4202/4207	\$19.95
P42191FM	FOLDING MECHANISM FOR 4202/4207/4214/4215	\$9.95
	(SCREWS INCLUDED)	
P42192	STEEL HANDLE (RIGHT) FOR 4202/4207	\$19.95
P42193BK	FLIP UP BACKREST FOR 4202BK	\$24.95
P42193BL	FLIP UP BACKREST FOR 4202BL	\$24.95
P42193GN	FLIP UP BACKREST FOR 4202GN	\$24.95
P42193PL	FLIP UP BACKREST FOR 4202PL	\$24.95
P42193RD	FLIP UP BACKREST FOR 4202RD	\$24.95
P-CABLE (PAIR)	CABLE FOR HAND BRAKE	\$3.50
P-COVER	BLACK CABLE COVER	\$3.50
V42009	A-FRAME SCREW SET FOR FRAME 4202/4203/4207/ 4218/4220/4222	\$2.50
V42076	BLACK PLASTIC HINGE FOR BACKREST	\$2.50
V42089	TRIANGLE SHAPED HEIGHT ADJUSTMENT KNOB	\$6.95
V42093	FOAM CUSHION FOR FLIP UP BACKREST	\$6.95

NOVA Customer Service: 800-557-6682
www.NovaMedicalProducts.com